



Western Rails Company

Western-rails.com


EBT Steel Box Car

To the right you will find the parts list with the color to help indicate placement on the model. The 18" and Corner Grab Irons and Sturrups can be purchased from Tichy Train Group, all others will need to be custom made, and we offer a jig that can be used to make all the grab irons on the list.

We recommend cleaning out all mounting holes before beginning installation; I used a #80 drill bit. I began by installing the side grab irons and worked my way around to the ends, once the mounting holes are drilled; I just inserted the leads and glued them in place from the inside of the car, clipping the extra as needed. On the corner ladders, care must be taken not to block the opening for the other ladder as space is tight there.

Parts List

- Kadee #713 or #714 couplers
- 4'8" EBT Vulcan Trucks (Kadee 726 or Blackstone B370113)
- 6 - 18" Grab Irons (yel) Tichy)
- 22 - 18" Drop Grab Irons (grn) Tichy)
- 2 - 28" Grab Irons (red) Custom)
- 2 - Corner Grab Irons (Tichy)
- 4 - Sturrups (Side Mount)

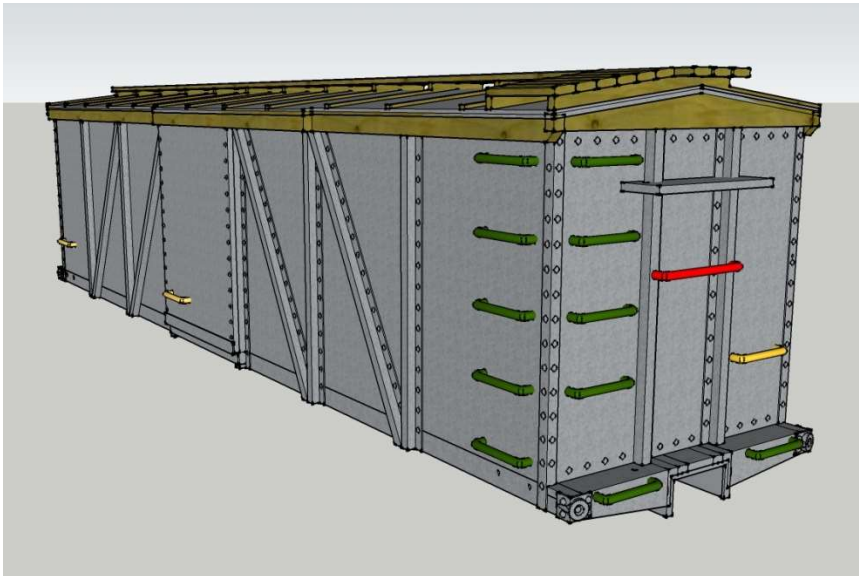

There are two holes on each end of the car in the side sills for mounting the sturrups, these will accommodate 12" x 12" wire formed or Tichy Straight Side Mount Sturrups. We use wire sturrups on our models as we anticipate them to be handled often for shows and sales events, we also do not install brake details for the same reasons.

Thank you for your purchase!
Enjoy your 3d printed model from Western Rails Company.