



# Western Rails Company

Western-rails.com

## WRC Trucks

Western Rails Company's trucks are ready to be printed. These trucks must be cleaned to remove the supporting wax, please refer to other instructions. Once you have cleaned and dried you need to use the center hole and firmly place a toothpick into it.




This will give you a handle to work with the trucks. While the trucks are robust, the brake detail components are not and must be handled with care. Using a needle or other micro applicator place a small drop of white glue into each of the four holes where the wheels are mounted.

Once the glue is dry (clear) you can paint the trucks in any manner you wish. I stick the toothpicks into a scrap chunk of foam insulation and use an airbrush with Modelers Decals and Paint. Once the paint is completely dry use a small tool (dental hook works well) to remove the glue. You now have a perfectly clean hole for the axle to pop into.



To Mount the trucks, we use a m1.6 x 6mm screw which easily fits into the provided mounting holes on our equipment.

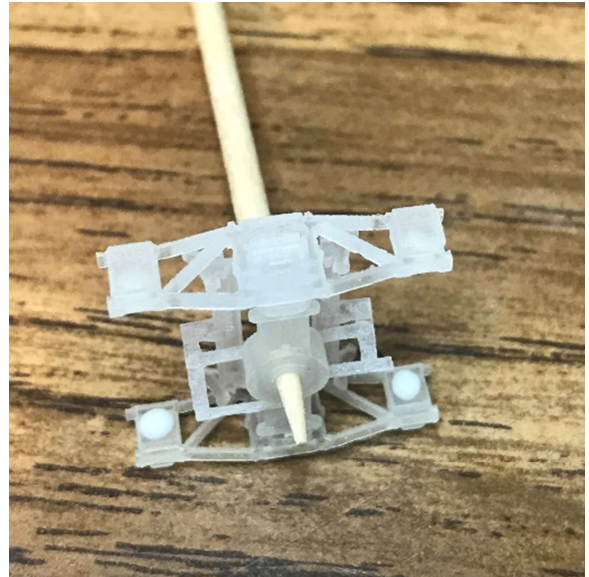

### Parts List

- WRC Trucks
- Toothpicks
- White School Glue
- Black paint
- Micro Applicator
- Foam Base/Holder

Using a needle or other micro applicator place a small drop of white glue into each of the four holes where the wheels are mounted.

Thank you for your purchase!  
Enjoy your 3d printed model from Western Rails Company.